# LUFTOOL Adapter ••

The LUFTooL Adapter offers a complete system of transitions between the 100 and 125 mm SPIRO duct and fittings sizes and modern plastic flexible pipe systems with 75 and 90 mm outer diameters. The joints are tight and solid thanks to the use of sealing and locking rings.

Flexible pipe 90 mm

ID: LT-AD-75-90

Adapter

# Fittings 100 and 125 mm

ID: LT-AD-75-100-N LT-AD-75-125-N



\* We recommend using fittings with sealings.

#### Transition from 90 mm flexible pipe to:

**Basic Types:** 

SPIRO 100 and 125 mm

ID: LT-AD-75-100-V

LT-AD-75-125-V

SPIRO 100 and 125 mm ID: LT-AD-90-100-V LT-AD-90-125-V

HT duct 40 a 50 mm ID: LT-AD-90-HT-40 LT-AD-90-HT-50



Fittings 100 and 125 mm ID: LT-AD-90-100-N LT-AD-90-125-N



\* We recommend using fittings with sealings.

### **Our Adapters are:**

#### manufactured in 13 desians

• suitable for flexible pipes of various manufacturers, fittings of SPIRO duct type and for flexible aluminium pipes (SONO, Thermo type, etc.)

#### · very tight:

- the connection of the flexible pipe and the transition achieves class C tightness (according to EN 15727) thanks to the use of a sealing ring
- the connection of the fitting with the SPIRO duct sealing rubber and the transition achieves class D tightness (according to EN 15727)
- the connection of the SPIRO duct and the transition is recommended to be sealed with aluminium tape
- thanks to their shape and design they achieve low pressure drop values

#### • made of PETG:

 
- which is flexible and solid
- has high impact resistance and durability
- is made from health-safe materials
- has low shrinkage on cooling
- is 100% recyclable

#### Package includes:

Plastic transition, sealing and locking ring - according to the number of connected flexible pipes. Delivery does NOT include aluminium tape. Packed in stretch foil.

### Coding:

# IT - AD - XX - YY - 7 Adapter LUFTool



SPIRO 100 and 125 mm, Fittings 100 and 125 mm, HT duct 40 and 50 mm, Flexible pipe 75 mm

### Installation:

#### LUFTooL adapters ensure quick installation.

#### A. Flexible plastic pipe

- 1. Thread the sealing ring onto the plastic flexible pipe between the first and second rib.
- 2. Apply lubricant (not included) to the sealing ring.
- 3. Insert the flexible plastic pipe into the adapter so that the locking holes are over the grooves.
- 4. Slide the blue locking ring over the holes in the adapter between the ribs of the plastic pipe.

#### B. SPIRO duct (SONO pipe)

- 1. Slide the duct onto the adapter and screw through.
- 2. Seal with aluminum tape.

#### C. SPIRO fittings

1. Slide the fitting with the sealing ring into the adapter and screw through. 2. Seal with aluminium tape.

#### D. HT pipe

- 1. Slide the HT pipe flange onto the adapter.
- 2. Seal with aluminium tape.

Check the anchorage of the pipe in front of and behind the adapter at the maximum distance of 0.5 m.

 
# Pressure Drop Values $\Delta P$ (Pa):

 $P_{tot} = P_{stat} + P_{dyn}$ 

Values for supply and exhaust air.


Size	Air flow (m³/h)					
(mm)	30	45	60	75	90	
75/100	2.4	5.4	9.2			
75/125	2.9	5.8	6.0			
90/100	1.5	3.3	6.1	9.3	12.2	
90/125	1.4	2.6	5.0	7.8	10.7	

Measured according to: EN ISO 12238 Measured for a reference air density of 1,2 kg/m<sup>3</sup>.



#### **Dimensions and Features:**

#### Flexible pipe to SPIRO fitting

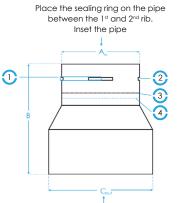

Insert the fitting with sealing ring

into the adapter

A.,

78.8

78.8

92.8

92.8

Flexible pipe

Place the sealing ring on the pipe

between the 1st and 2nd rib.

Inset the pipe

Place the sealing ring on the pipe

between the 1st and 2nd rib.

Inset the pipe

Α.

92.8

LT-AD-

75-100-N

75-125-N

90-100-N

90-125-N

ID 75/100: LT-AD-75-100-N

ID 75/125: LT-AD-75-125-N

units

(mm)

1

1

units

(mm)

C<sub>out</sub>

100

125

100

125

В

130

130

130

130

ID 90/100: LT-AD-90-100-N

ID 90/125: LT-AD-90-125-N

2

3

2

Cout


75

В

130




SPIRO duct stop

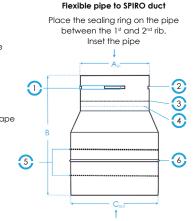

Slide the pipe in

LT-AD-	A <sub>in</sub>	В	C <sub>out</sub>	
75-100-V	78.8	160	100	
75-125-V	78.8	160	125	
90-100-V	92.8	160	100	
90-125-V	92.8	160	125	
D75/100: LT-AD-75-100-V D75/125: LT-AD-75-125-V		ID 90/100: LT-AD-90-100-V ID 90/125: LT-AD-90-125-V		
	75-100-V 75-125-V 90-100-V 90-125-V T-AD-75-100-V	75-100-V 78.8   75-125-V 78.8   90-100-V 92.8   90-125-V 92.8   1-AD-75-100-V ID 90/1	T5-100-V 78.8 160   75-125-V 78.8 160   90-100-V 92.8 160   90-125-V 92.8 160   17-125-V 92.8 160   160-125-V 92.8 160	

Flexible pipe to HT duct Place the sealing ring on the pipe between the 1<sup>st</sup> and 2<sup>nd</sup> rib. Inset the pipe

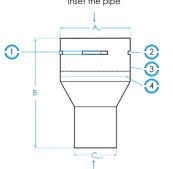

Slide the HT duct flange onto the adapter

units (mm)	LT-AD-	A <sub>in</sub>	В	C <sub>out</sub>
	75-HT-40	78.8	130	40
	75-HT-50	78.8	130	50
	90-HT-40	92.8	130	40
	90-HT-50 92.8 130	130	50	
75/40: LT-AD-75-HT-40 ID 90/40: LT-AD-90-HT-40   75/50: LT-AD-75-HT-50 ID 90/50: LT-AD-90-HT-50				

IC

# Accessories:



DALFLEX HYGIENIC -Flexible Pipe ID: DALFLEX75b ID: DALFLEX90b



**Spiro Duct 100, 125, 150, 160, 200) 3 m** ID: SPIRO100 ID: SPIRO125



Self-adhesive Aluminum Tape ID: ALU50/50



Self-tapping Screws 4.2-13 mm SPIRO ID: SCR4,2/13



Pipe Clamp for Ventilation Ducts ID: CLAMP90



Luftool Duct Cutter ID: LT-DC-H-75 ID: LT-DC-H-90

# Example of Product Use

We offer a solution to efficiently ventilate the toilet without heat loss. Modern toilets are often equipped with units for extracting odors. To make the system 100% energy efficient, it is advisable to integrate it into a heat-recovery ventilation system. Components are provided by the LUFTooL Smell Well range.



Adapter

ID 75-90: LT-AD-75-90

LT-AD-

75-90